



L.M. BECKER & CO., INC.

SUPER TOY 'N JOY

You have just received the finest vending machine produced. This machine has many features you should be aware of.

We have two models of this Super Toy 'N Joy - the regular size unit, Model #600 which holds 600 eggs or capsules and is 18" x 24" x 56" high. The large unit is Model #1200 and holds 1200 eggs or capsules and is 24" x 24" x 56" high.

TO FILL MACHINE

REGULAR SIZE MODEL #600

Using key identified as "merchandise key" unlock and remove panel at rear of machine. You will notice that the display poster is located in a tray on the front side of the back panel.

With this rear panel removed, you can now insert or change the merchandise display card in the black tray in the front of the machine. It is also very easy to fill the machine so the product is level with the bottom of the rear door opening.

Rear access panel can now be returned to position and locked.

LARGE MODEL #1200

Using key identified as "merchandise key" unlock rear panel. After opening top section, entire door panel can be removed if desired by lifting it upward.

The poster tray can be tilted back to gain access to the merchandise display card tray area. All you do is raise it slightly toward the top of the machine and then pull it toward the back of the machine. It will then pivot down out of the way. It can also be removed should you choose to do so. To replace, return to pivot pins and return to full upright position.

To fill machine, place display card in display tray while tray is in tilted back position. Then return tray to normal position. You can now pour eggs into rear access opening and they will flow under tray to front hopper area. As hopper fills, you can push eggs by hand under bottom of tray until they are up to the height of the chicken. At this point, you can replace back panel.

To replace back panel, place lower lip of door panel into slot between red cabinet and metal strip, and return door to fully closed position. It will then drop in place and top section will open to form funnel area for pouring additional eggs into hopper area behind tray. Caution should be used to not rest entire weight of case on door panel in this semi closed position.

One of the nice features of your Super Toy 'N Joy Machine is that it is equipped with large casters which makes it very easy to move about.

To move machine, stand behind it and gently tip the top toward yourself. Holding it by the side and near the top, you can now move it much like a hand truck. To move it back against a wall after filling, push on the top front corners and it rolls rearward. To remove it from the wall for service, lift on coin mechanism handle with one hand and while pulling forward with hand on handle, use other hand to tilt it backward slightly at the top.

The 25¢ coin mechanism is easily replaced should that be necessary. Simply loosen the wing nuts on each side of the coin mechanism and by lining the handle up with the slot in the door panel, you can remove it. Replacement mechanisms can be installed in a similar manner - line up handle with slot to insert mechanism and retighten wing nuts on brackets on each side.

Please notice the red tooth on the teeth of the gear driven by the coin mechanism. This red tooth MUST be centered beneath screw before door is closed.

The sound device is the flesh colored plastic case in the upper right hand corner of lower area. This can be removed by loosening wing screw completely and moving device to the right slightly and then pulling it forward. Be sure to retighten wing screw securely when replacing unit.

There is a label on the inside of the door panel that tells how the records can be turned over or changed. Records may be turned over or changed by opening latch and pulling off record. Press record back onto spindle and close cover.

Batteries should be changed when the sound becomes slow or is not loud. The battery in the flesh colored sound device is a "C" size battery, and should be of the alkaline type for long life. Be sure to insert new battery as shown by imprint in battery receptacle. The battery in the amplifier is a 9 volt, and should also be of the alkaline type.

Sound device is returned by reinserting device in holder, placing tapered end in first with speaker area facing toward the chicken.

If your machine is equipped with the extra character changes, (the Santa, Pumpkin, and Clown) these should be stored in the lower compartment when not in use. They should be put into the polybag along with their appropriate record so they are available when needed. The appropriate posters should be left in the poster tray (or door) so they too are available when next needed.

There are additional features regarding changing front door or window should that be necessary. Should any of these major items ever require service, we suggest you call our office for assistance. Our toll free number 1 - 800-558-8357 appears on a label on the back of the machine.

As with all of our Toy 'N Joy vending equipment, this vendor is covered by our no charge exchange policy for repair parts. Should the coin mechanism or sound device become defective, we will replace or repair any defective parts that are returned to us. If there are any other repairs needed or unusual problems arise, please feel free to call our office.

1 - 800 - 558 - 8357

L.M. BECKER & CO., INC.

Appleton, WI 54911



Certificate of Insurance

THIS CERTIFICATE IS ISSUED AS A MATTER OF INFORMATION ONLY AND CONFERS NO RIGHTS UPON THE CERTIFICATE HOLDER.
THIS CERTIFICATE DOES NOT AMEND, EXTEND OR ALTER THE COVERAGE AFFORDED BY THE POLICIES LISTED BELOW.

NAME AND ADDRESS OF AGENCY

Babbitt-Sholund Insurance Agency
P.O. Box 745
Neenah, Wisconsin 54956

COMPANIES AFFORDING COVERAGES

COMPANY LETTER **A** **UNITED STATES FIDELITY & GUARANTY CO.**

COMPANY LETTER **B**

COMPANY LETTER **C**

COMPANY LETTER **D**

COMPANY LETTER **E**

NAME AND ADDRESS OF INSURED

L. M. Becker & Co. Inc.
P.O. Box 1459
Appleton, Wisconsin 54913

This is to certify that policies of insurance listed below have been issued to the insured named above and are in force at this time. Notwithstanding any requirement, term or condition of any contract or other document with respect to which this certificate may be issued or may pertain, the insurance afforded by the policies described herein is subject to all the terms, exclusions and conditions of such policies.

COMPANY LETTER	TYPE OF INSURANCE	POLICY NUMBER	POLICY EXPIRATION DATE	Limits of Liability in Thousands (000)		
					EACH OCCURRENCE	AGGREGATE
A	GENERAL LIABILITY	ICC 012554168	1-1-84	BODILY INJURY	\$ 500	\$ 500
	<input checked="" type="checkbox"/> COMPREHENSIVE FORM			PROPERTY DAMAGE	\$ 100	\$ 100
	<input checked="" type="checkbox"/> PREMISES OPERATIONS					
	<input type="checkbox"/> EXPLOSION AND COLLAPSE HAZARD					
	<input type="checkbox"/> UNDERGROUND HAZARD					
A	AUTOMOBILE LIABILITY	ICC 012554168	1-1-84	BODILY INJURY AND PROPERTY DAMAGE COMBINED	\$	\$
	<input checked="" type="checkbox"/> PRODUCTS COMPLETED OPERATIONS HAZARD					
	<input type="checkbox"/> CONTRACTUAL INSURANCE					
	<input type="checkbox"/> RETAIL FORM PROPERTY DAMAGE					
	<input checked="" type="checkbox"/> INDEPENDENT CONTRACTORS					
A	EXCESS LIABILITY	CEP 014066580	1-1-84	PERSONAL INJURY	\$	\$
	<input checked="" type="checkbox"/> UMBRELLA FORM					
	<input type="checkbox"/> OTHER THAN UMBRELLA FORM					
	WORKERS' COMPENSATION and EMPLOYERS' LIABILITY					
	OTHER					
A	WORKERS' COMPENSATION and EMPLOYERS' LIABILITY	46 02865 83 6	1-1-84	BODILY INJURY (EACH PERSON)	\$ 500	
	<input type="checkbox"/> COMPREHENSIVE FORM			BODILY INJURY (EACH ACCIDENT)	\$ 500	
	<input type="checkbox"/> OWNED			PROPERTY DAMAGE	\$ 100	
	<input checked="" type="checkbox"/> HIRED			BODILY INJURY AND PROPERTY DAMAGE COMBINED	\$	
	<input checked="" type="checkbox"/> NON OWNED					
A	EXCESS LIABILITY	CEP 014066580	1-1-84	BODILY INJURY AND PROPERTY DAMAGE COMBINED	\$ 5,000	\$ 5,000
	<input checked="" type="checkbox"/> UMBRELLA FORM					
	<input type="checkbox"/> OTHER THAN UMBRELLA FORM					
	WORKERS' COMPENSATION and EMPLOYERS' LIABILITY					
	OTHER					
A	WORKERS' COMPENSATION and EMPLOYERS' LIABILITY	46 02865 83 6	1-1-84	STATUTORY	\$ 100	
	<input type="checkbox"/> COMPREHENSIVE FORM					
	<input type="checkbox"/> OWNED					
	<input checked="" type="checkbox"/> HIRED					
	<input checked="" type="checkbox"/> NON OWNED					


Additional Insureds per Vendors Limited form GL 20 16 includes Any Persons or Organization for all products of insured.


Cancellation: Should any of the above described policies be cancelled before the expiration date thereof, the issuing company will endeavor to mail _____ days written notice to the below named certificate holder, but failure to mail such notice shall impose no obligation or liability of any kind upon the company

NAME AND ADDRESS OF CERTIFICATE HOLDER

TO WHOM IT MAY CONCERN

DATE ISSUED **January 5, 1983**

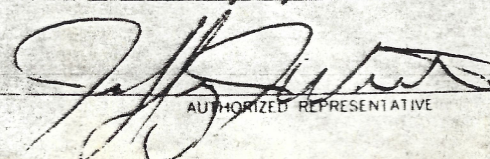
AUTHORIZED REPRESENTATIVE

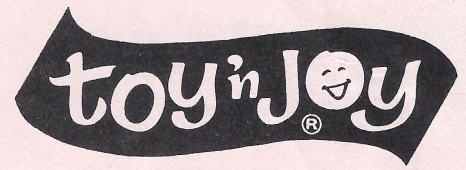

INSTALLATION INSTRUCTIONS
FOR TOY 'N JOY TALKING MACHINE
CHARACTER CHANGES

CHICKEN character with BARNYARD scene and "CLEAR" CHICKEN sound record.

CLOWN character with SUMMER CIRCUS scene and "GREEN" CIRCUS record.

PUMPKIN character with FALL scene and "CLEAR" HAPPY PUMPKIN record.

SANTA character with CHRISTMAS scene and "RED" SANTA record.

EASTER BUNNY character with EASTER scene and "BLUE" EASTER record.

*

*

*

To change the characters, scenes, and records in your Toy 'N Joy Talking Machines to correspond with the season, follow these simple steps.

1. Open rear door panel and lift up to remove it from the machine.
2. On the #1200 unit, lift black poster tray up slightly to permit it to tip toward you giving you access to the character presently in your machine.

On the #600 unit, this tray is in the back door you just removed.

3. Lift existing character off mounting post and replace with the character that corresponds with the season of the year.
4. Insert the proper poster for the character being used in the front position of the scene tray. All other posters are to remain in this tray behind the scene you want exposed.
5. Close and lock rear door panel.
6. Open front door and remove flesh colored sound device. There is a label on the inside of the machine which gives you information on the sound device.
7. Remove present record by lifting it off and then snap correct record in place.
8. Return sound device to its proper position and retighten wing screw.
9. All extra characters and records should be left in polybags and stored in the lower area of your machine.

N O T E: If you have any problems with the machine or in obtaining the #925 refills, call Customer Service toll free at 1-800-558-8357.

PLEASE SAVE THIS INSTRUCTION SHEET FOR FUTURE REFERENCE.

NOTICE

The unused character changes for your Super Toy 'N Joy vendor are stored in the lower compartment of this vendor.

The chicken character for this vendor is attached to the mounting post with a rubber band for shipment. This rubber band should be removed.

The battery for the sound device is packed in the coin box.

Loosen wing screw and remove flesh colored sound device. Remove protective strip from battery if necessary and insert battery in flesh colored sound device. Care should be taken to insert battery with positive terminal as indicated by imprint inside battery receptacle.

There is also a speed adjustment button beneath the battery. To adjust speed, move button to left or right until proper speed is obtained.

Return sound device to holder and tighten wing screw.

Be sure to store all unused posters in poster tray and to return unused character heads and records to their plastic bag and store them in the lower compartment of your machine.

6/1/82



RE: TOY 'N JOY UNIT

Gentlemen:

Thank you for your recent purchase of our Toy 'N Joy vending unit. You are one of over 25,000 stores realizing the extra profit available by owning your own Toy 'N Joy vending machines. Enclosed is your Certificate of Insurance which L. M. Becker & Co., Inc. furnishes with each unit.

Also enclosed is our broker label with his name and address which should be attached to the back of one of the machines. If you have any problems with your machines, contact the broker's office for repairs, or you may return to us any damaged coin mechanisms for replacement at no charge to you.

We suggest that one person be in charge of the machines to keep them filled and clean at all times. A clean and filled machine will sell much faster, and with the extra profit, you can't afford to miss any sales.

We know you will be satisfied with the profit your Toy 'N Joy unit will bring. If at any time L. M. Becker & Co., Inc. can be of assistance, please do not hesitate to call upon us.

Very truly yours,

L. M. BECKER & CO., INC.

SALES DEPARTMENT

lal

Enclosures

FOR SERVICE CONTACT:
L & L Sales Company
Call Collect:
(503) 231-9647